

# Instruction Sheet

**Subject: MHC Menu Update Instructions**

**Models affected: MercoMax (MHC) Visual Holding Cabinets**

**Follow these instructions to update the menus in the MercoMax (MHC) Visual Holding Cabinets.**

1. Remove power from the unit.
2. Remove the four (4) screws that secure the top of the cabinet (see Figure 1).
3. Lift and remove the top of the cabinet (see Figure 2).
4. Remove the right side of the cabinet, as viewed from the front of the cabinet by sliding the side up (see Figure 3).
5. On the rear of the touch screen controller, disconnect the USB cable (see Figure 4).
6. Insert the USB drive with the menu file into to the touch screen controller (see Figure 5).
7. The file will load and display a message when complete (see Figure 6).
8. Press the YES button and remove the USB drive (see Figure 6).
9. Reattach the USB cable removed in step 5.
10. Power cycle the cabinet by switching OFF the power switch for five (5) seconds and switching back on.



**Figure 1**




**Figure 2**




**Figure 3**



**Figure 4**

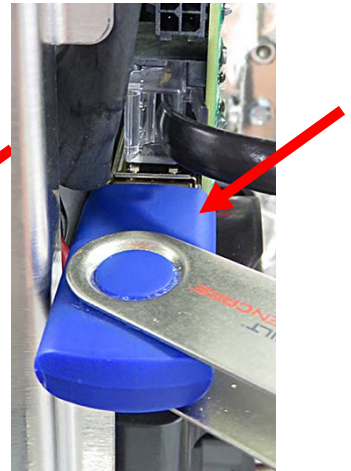

**Figure 5**

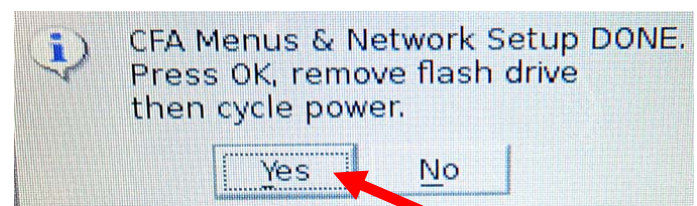

**Figure 6**

11. Once the cabinet is fully rebooted, the main screen is displayed (see Figure 7).



Figure 7

12. Press the USB icon from the home screen (see Figure 8).

Figure 8

13. The MenuConnect Update screen is displayed (see Figure 9).

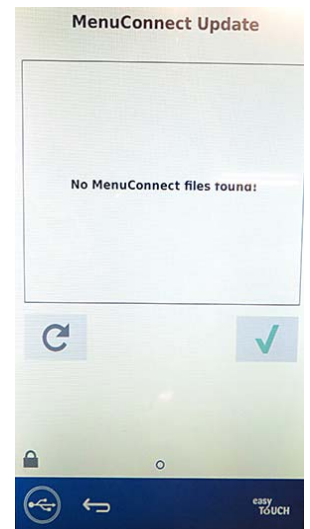


Figure 9

14. Press the lock icon in the lower left corner of the display (see Figure 10).



Figure 10

15. Enter code **159357** and press the GREEN check button (see Figure 11).



Figure 11

16. Press and hold the refresh button for three (3) seconds (see Figure 12).



Figure 12

17. The menus are displayed. Select the menu desired. Once selected it is highlighted in green (see Figure 13).

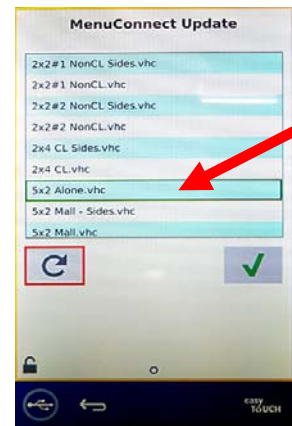


Figure 13

18. Press the GREEN check button to select the highlighted menu (see Figure 14).



Figure 14

19. Press the CLOSE button when the menu has been imported (see Figure 15).

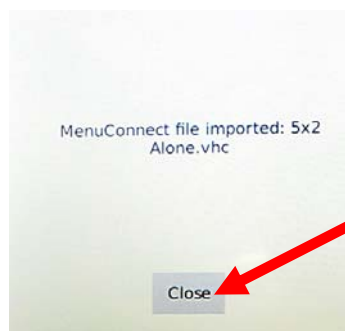


Figure 15

20. Press the "return" arrow to return to the home screen (see Figure 16).



Figure 16

21. Press the Press & Go button to view the products (see Figures 17 & 18).



Figure 17

22. Reattach the side panel and cover.

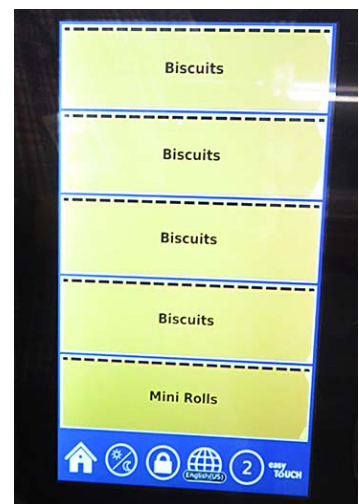


Figure 18